



Adjusting oil spray

Use screw driver to adjust oil spray.

Turn oil adjusting screw clockwise to decrease oil spray. Turn oil adjusting screw counter -clockwise to increase oil spray.



Pressure regulating

Pull up regulator knob and turn it clockwise to increase pressure.

Pull up regulator knob and turn it counter-clockwise to decrease pressure.



The way to fill oil

Open oil plug, fill oil directly without cut off air supply. ISO VG32 lubricator oil is highly recommended. *For (UL02~08)



Semi-auto drain

The water drain automatically when air pressure in filter bowl is below 0.5kgf/cm². You can also turn down the stopcock to stop drain.



How to use sleeve valve

Pull backward to stop air and release residual air pressure. Push forward to open air line.



Bowl & Bowl guard

Turn counter-clockwise to take off bowl and bowl guard. High quality material provides product long-life and easy maintenance.

