


BF ASSEMBLY SHEET.

CONTROLLERS ARE REMOVED FOR SHIPPING OR INSTALLATION.


GASKET SET = Gasket + 2x M6 Bolts + Brass Insert.

Push Brass Insert (A) Into pilot hole (B).

Insert will only fit into one hole.

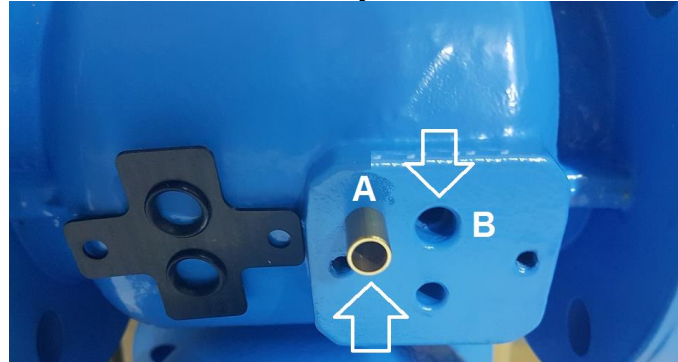

Place Gasket Over Pilot Holes (P) and Screw Holes (S).

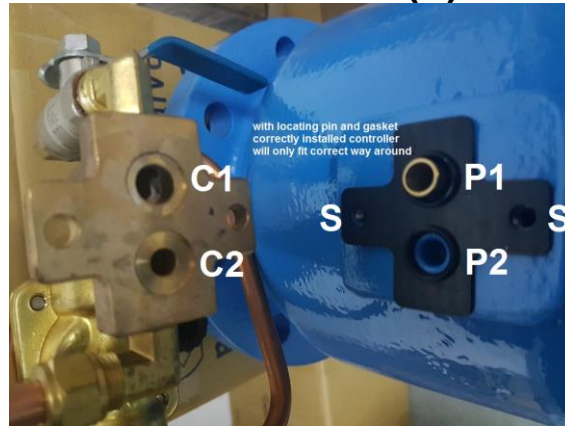

Place the Pipework Assembly onto the gasket by Hand, making sure P1 insert fits into C1, and P2 into C2. It should only fit one way around.

Insert & tighten the 2x M6x1mm 15-20mm long bolts provided.

Do not to over tighten as to strip the threads.

